


whiterowesblinds

quality blinds at quality prices

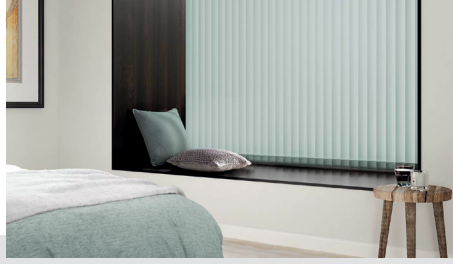

FITTING INSTRUCTIONS

- VERTICAL BLINDS - EASY TO INSTALL



1. Install wall or ceiling bracket,

ensuring they are in line about 8 - 9cm away from the window frame. Brackets should be about 4 - 5" from the ends. Take note of any obstructions such as window handles and allow for clearance.



2. Attaching headrail

(Top Fit)

Insert front edge into bracket and push up to clip in the back.

(Face Fit)

Insert back edge into bracket first and tighten screw.



3. Hanging Slats

Make sure slats are in the open position as shown in picture. There are two holes in the hanger for the slats, if your slats hang too low simply snip the first hole off with a pair of scissors and use the second hole.



4. Weights and chains

Insert weights and clip on chain as shown in picture.

5. Make it Safe

An appropriate safety device has been included with your blinds. Please make sure this device is installed according to these instructions.

Child Safety Device

Insert the cord, pull down the device so the cord is taut, mark and drill a hole. Insert chain and screw to the wall.